




Installation, Operation & Maintenance Manual

MODEL RJ6

ROLLING JACK

(Model 40 & 4P Series 4-Post & EV10RK Runway Kit)

6,000 lbs Capacity

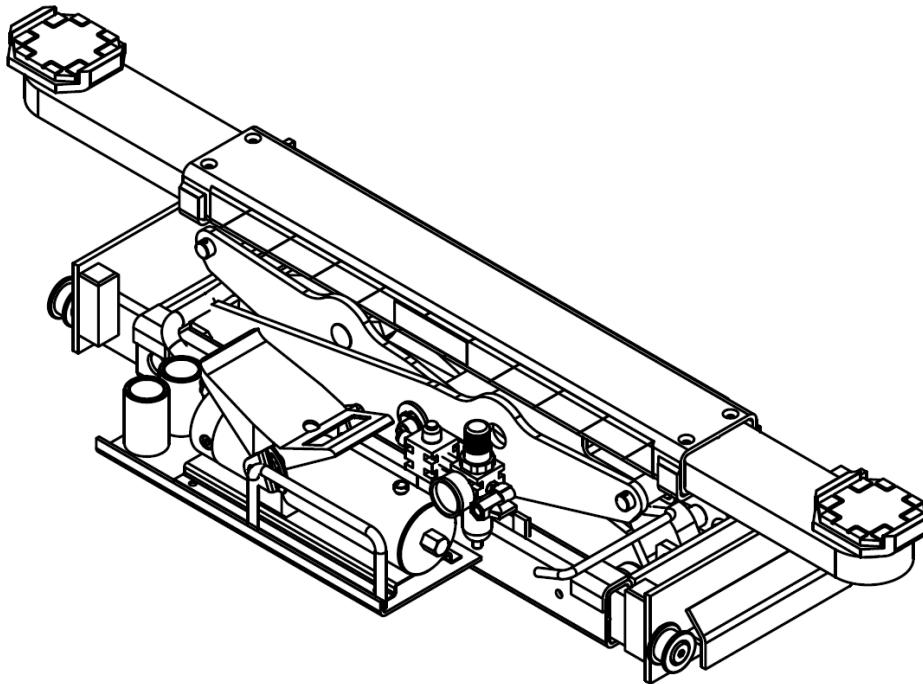

2311 South Park Rd Louisville, Kentucky 40219
Email: Challengerlifts@soe.freshdesk.com Phone: 800-648-5438

IMPORTANT: READ THIS MANUAL COMPLETELY BEFORE
INSTALLING or OPERATING LIFT

⚠ CAUTION

- ◆ Before using this product, read and fully understand the operating instructions and all decals on the product. This is necessary to prevent injury to the operator and damage to the product.
- ◆ Roll jack forward before moving vehicle on or off lift.
- ◆ Do not attempt to use this jack for anything other than its intended purpose.
- ◆ If jack begins to tilt as the vehicle is raised, STOP! Lower jack and reposition the vehicle.
- ◆ Do not use this jack if it is visibly worn, distorted or damaged.
- ◆ Maximum air operating pressure not exceed 150 p.s.i.
- ◆ Always wear appropriate eye protection.

⚠ WARNING

- ◆ Lifting capacity of this jack is 6000lbs (Hydraulic Pressure at Cap. = 4500 psi) Exceeding this could result in severe personal injury or death.
- ◆ When the total lifting capacity of 2 rolling jacks differs from the rated capacity of the lift they are used on, the capacity of each jack should not exceed 1/2 the total capacity of the runways. Exceeding this could result in severe personal injury or death.
- ◆ Lift vehicle at manufacturer's recommended pick-up points only. Vehicle weight must be evenly distributed on each jack lift pad.
- ◆ Keep fingers and hands clear of all pinch points at all times.

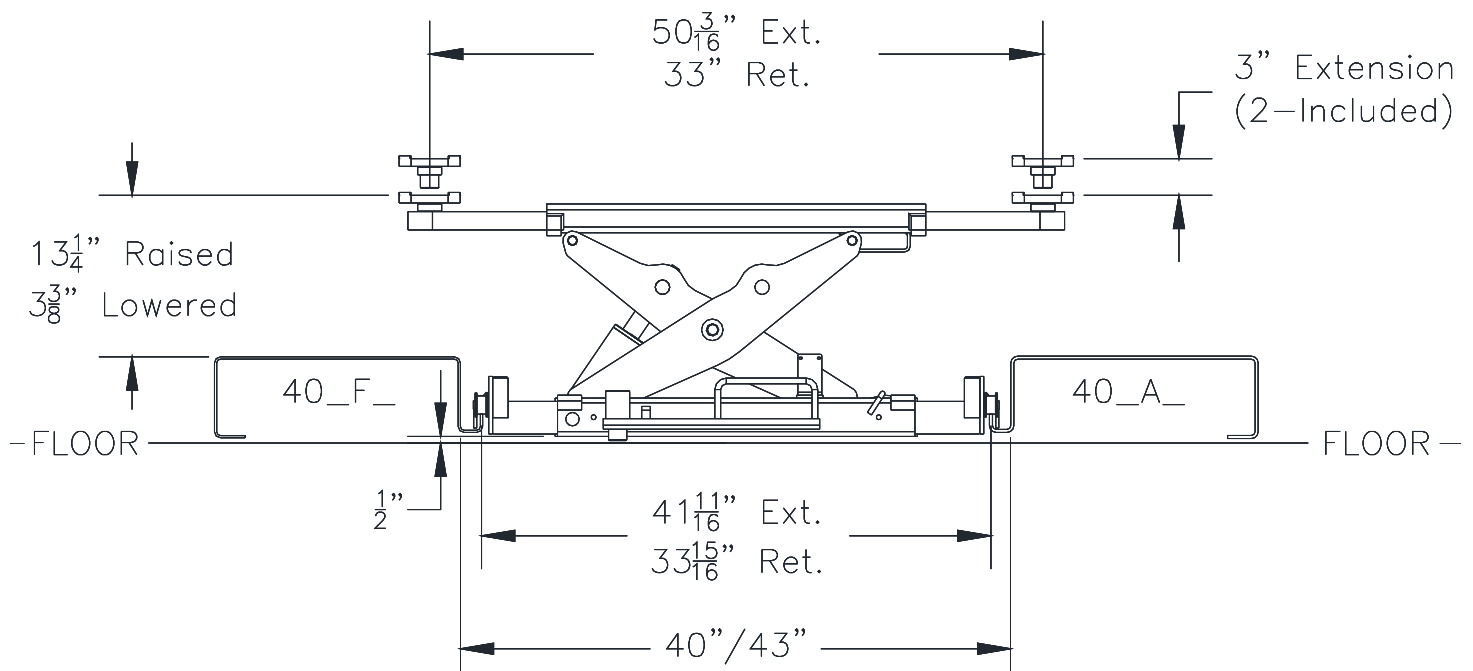


Fig. 1

INSTALLATION

- 1) Install a 1/4 NPT male quick disconnect coupling in air inlet of F.L.R. preinstalled on jack. Match to shop fittings.
- 2) Place jack assembly on lift rack rails
- 3) Once side members are adjusted and jack is centered between the rails, tighten the (4) hex bolts (2 per side) to lock in place, Fig 2.

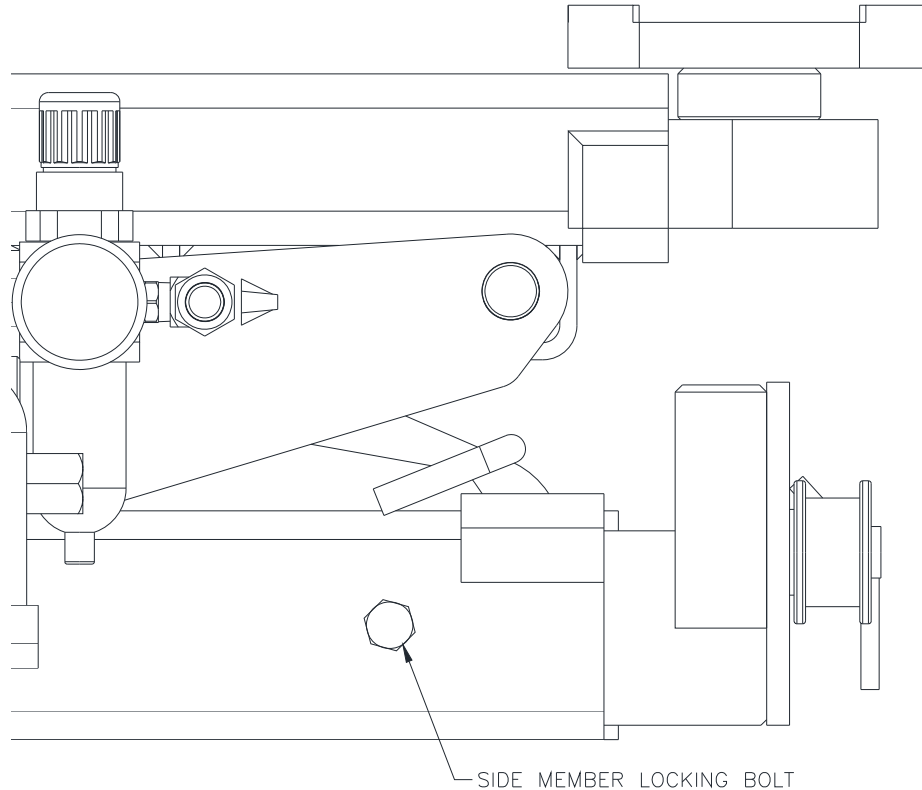


Fig. 2

Operation

Note: Before lifting a vehicle, operate the jack through a couple of cycles to become familiar with the controls.

- 1) Roll jack forward before moving vehicle on lift rack. Be sure vehicle is centered on rack, apply parking brake and chock wheels.
- 2) Roll jack(s) to the vehicle manufacturer's recommended pick-up points. Extend lift pad arms to proper lift points. Use lift pad spacers if necessary.
- 3) Raise jack by pushing on foot pedal on pump.
- 4) Raise vehicle to desired height.
- 5) Lower jack onto lock.
- 6) To lower jack completely, raise off of lock and while holding lock release handle open lower jack. Push lift pad arms in, remove lift pad spacers (if used). Roll jack forward before moving vehicle off rack.


Loss of power

If for any reason the lift will not raise off the locks or the locks will not retract, consult factory authorized personnel.

DO NOT OVERRIDE ANY SAFETY FEATURE IN AN ATTEMPT TO LOWER THE LIFT.

Adjusting the Release Mechanism

- 1) Loosen the "Adjusting Screw"
- 2) Verify that the "Adjusting Plate" is free.
- 3) Depress the "Air Inlet Stem" with the "Foot Pedal". The pump will now run and build pressure.
- 4) Release the "Foot Pedal". The pump will stop running, but hydraulic pressure will be held.
- 5) With the "Foot Pedal" resting on the "Air Inlet Stem" rotate the "Adjusting Plate" clockwise until a stop is felt.
Note: If the end of the slot in the "Adjusting Plate" is met before a stop is felt, the "Adjusting Plate" must be repositioned one step counterclockwise on the "Hex Stem", then repeat step #5.
- 6) Tighten the "Adjusting Screw". The release mechanism is now properly set.

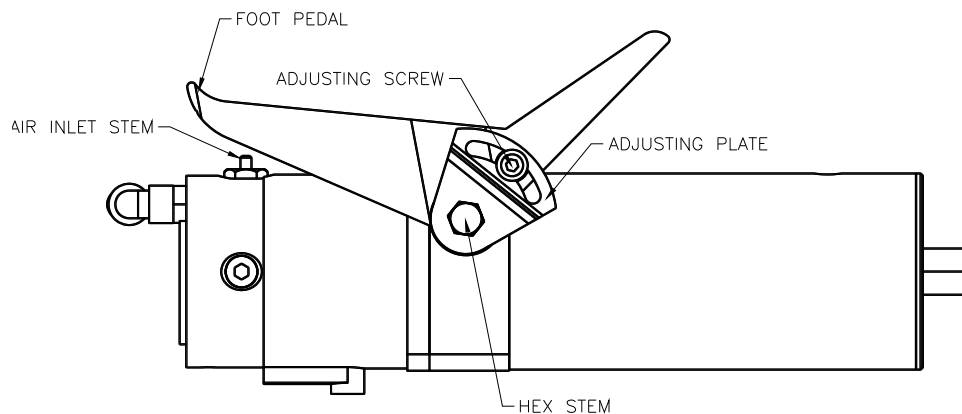

Maintenance

Daily: Inspect jack and its components for damage or excessive wear. Replace parts as required. See parts list.

Inspect air/hydraulic system for leaks. Check in-line lubricator oil level.


Annually: Check hydraulic pump fluid level. When jack is completely lowered remove breather plug and check oil level. Oil should be at top of filler plug hole.

IMPORTANT!

Failure to keep lift free of corrosive agents and solvents will lead to reduced service life, which could result in property damage and/or personal injury. If any problems are encountered, contact your local service representative.

RJ6 Installation, Operation and Maintenance Manual

Parts Breakdown

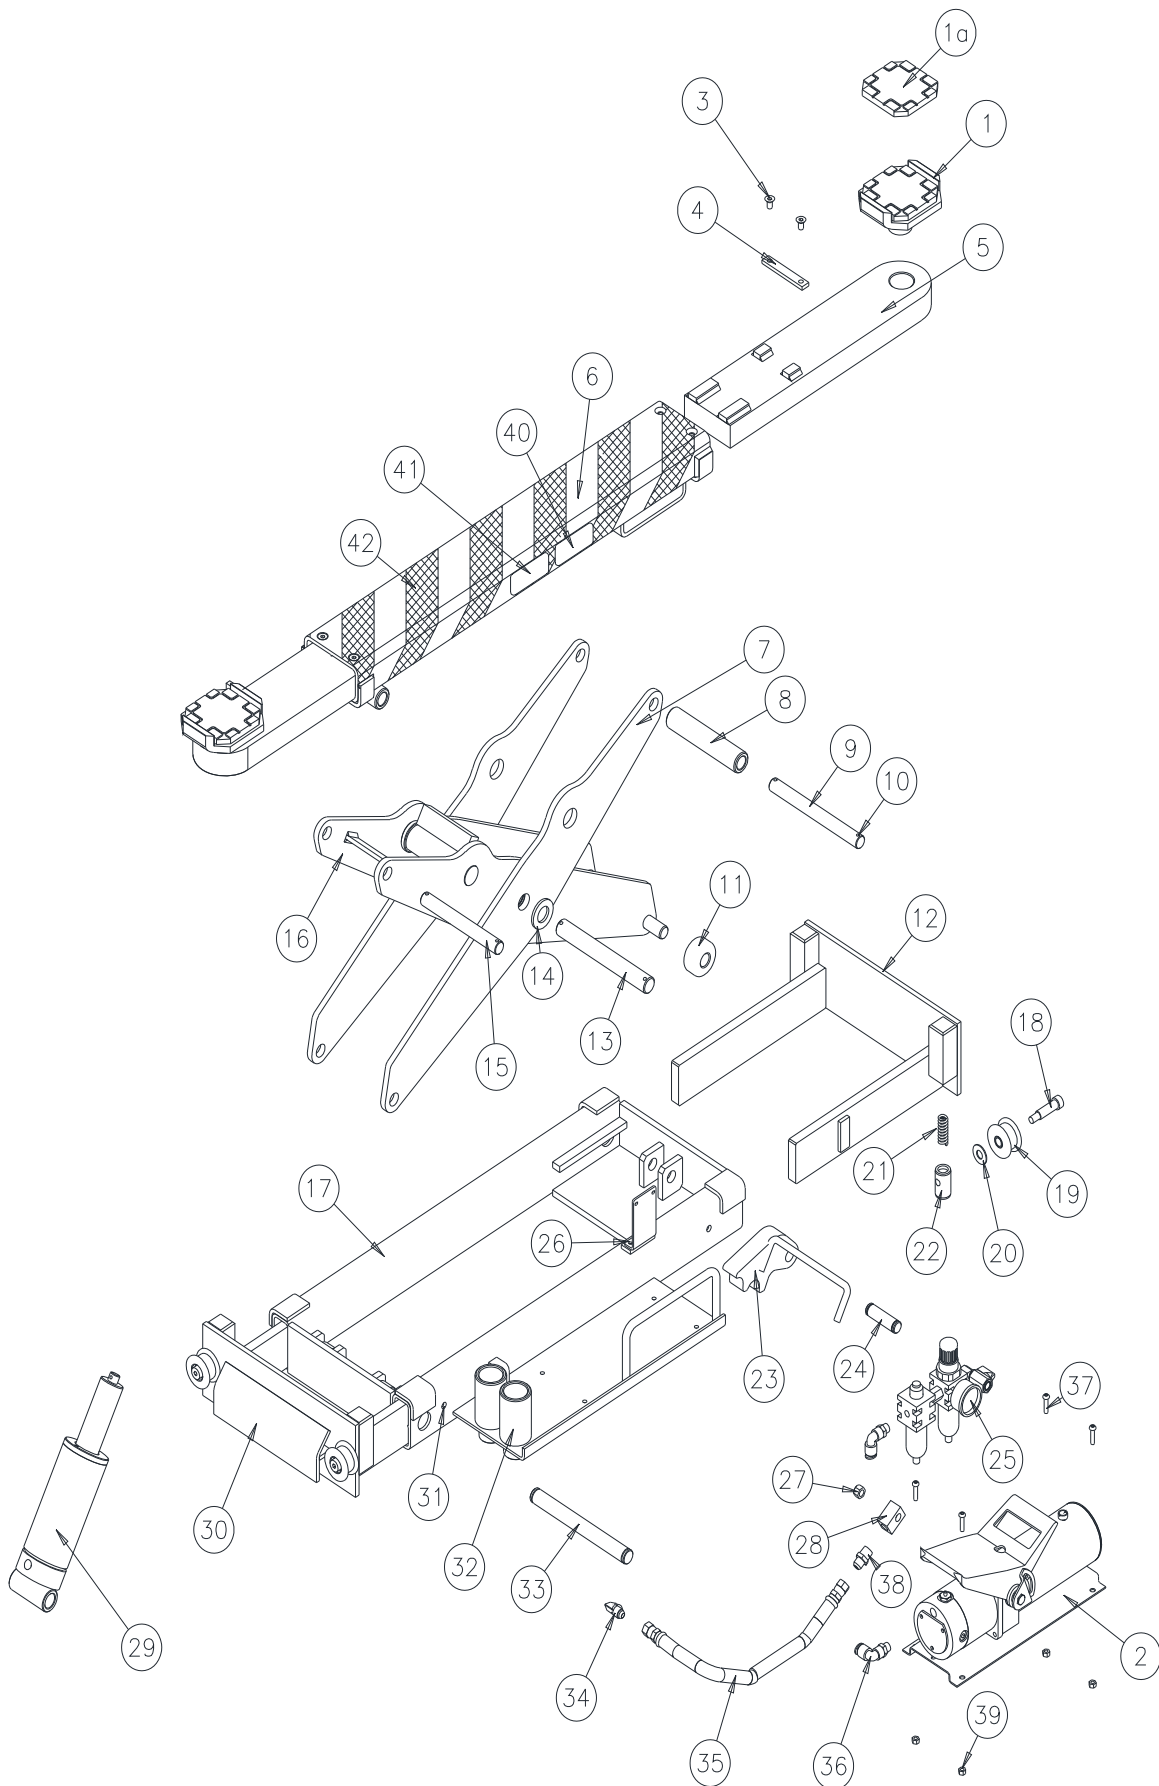

RJ6 Installation, Operation and Maintenance Manual

Item Number	Part Number	Qty/Jack	Description
1	RJ9-04-00A	2	Foot Pad
1a	A1104-H	2	Urethane lifting Pad
2	PA133U113	1	Air/Oil Pump
3	VS10-31-08	4	M8 x 12 Flat Head Screw
4	RJ6-19	2	Stop Bar
5	RJ6-02CH	2	Arm
6	RJ6-01CH	1	Sleeve
7	RJ6-07CH	2	Outer Scissor Plate
8	RJ6-06-04	1	Upper Pin Roller
9	RJ6-13	1	Upper Pin
10	VS10-20-10	6	5mm Roll Pin
10A	X10-099	4	20mm Washer
11	RJ6-18	2	Roller
12	RJ6-15CHA	2	Side Member Weld
13	RJ6-08	1	Main Pin
14	RJ6-23	2	Spacer Washer
15	RJ6-12	1	Upper Pin, Fixed End
16	RJ6-06CH	1	Internal Scissor
17	RJ6-11CH	1	Jack Body
18	RJ6-27CH	4	16mm Dia. Shoulder Bolt
19	RJ6-17CH	4	Wheel
20	RJ6-24CH	4	Nylon Washer
21	RJ6-26A	4	Compression Spring
22	RJ6-25CH	4	Carrier
23	RJ6-16CH	1	Lock
24	RJ6-20CH	1	Lock Pin
24A	RJ6-39	2	18mm Snap Ring
25	24101	1	FLR Assembly, Including Gage and Fittings
26	RJ6-28	1	FLR Bracket
27	X10-096	1	M10 Nylon Locknut
28	351450	1	Hose Block
28A	RJ6-37	1	4mm x 50mm Cotter Pin
29	RJ6-09CHA	1	Cylinder, Flow-Restricted
30	RJ6-15-00CH	2	Side Member Assembly
31	X10-077	4	M10 x 25 HHCS
31A	RJ6-38	4	M10 Hex Nut
32	RJ6-05	2	3" Stack Pad
33	RJ6-14	1	Cylinder Pin
33A	RJ6-40	2	15mm Snap Ring
34	RJ6-22CH	1	Hydraulic Elbow
35	RJ6-21CH	1	Hydraulic Hose
36	RJ6-31	2	10mm Push Loc Elbow
37	RJ6-41	4	M6 x 25 Allen Screw
38	JSJ3-10-04	1	3/8 NPT x M14 37 Deg. Flare Adapter
39	B31061	4	M6 Nylon Locknut
40	Z16777	1	Jack Capacity Decal
41	RJPWD	1	Warning pinch point decal
42	RJ7.5PCT	1	Caution tape upper sleeve

IMPORTANT!

Replace all worn, damaged, or broken parts with parts approved by **Challenger Lifts Inc.**
or with parts meeting **Challenger Lifts Inc.** specifications.

Contact your local Challenger Lifts Parts Distributor for pricing and availability.
(Call Challenger Lifts Inc. (502) 625-0700 for the Parts Distributor in your area)

NOTES

Revisions

2025/01/03 – UPDATED COVER SHEET.

2025/07/18 – UPDATED FOOTPAD TO INCLUDE THE URETHANE INSERT.

2025/08/06 – UPDATED PARTS BREAKDOWN TO SHOW REPLACEMENT URETHANE PAD A1104-H

2026/07/29 – ADDED PART NUMBERS FOR DECALS. #41 & 42